



# HP Envy m6-k022dx Speaker Replacement

This will show you how to replace the speaker in the computer.

Written By: Kareem Rigaud





## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Lower Case




- There are 12 phillips head screws which need to be unscrewed before removing the backplate of the laptop.

## Step 2



- Next, use a size PH1 Philips head screw driver to remove the screws.

### Step 3

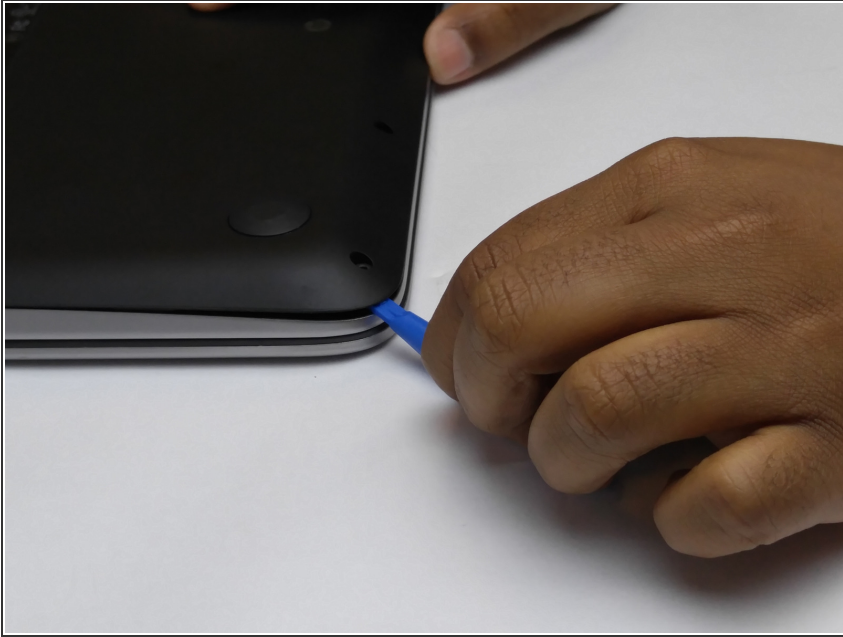

- Then, use a prying tool to help uncouple the backplate.


### Step 4



- Finally, use both hands to lift up and take off the back plate of the computer.



## Step 5 — Speaker

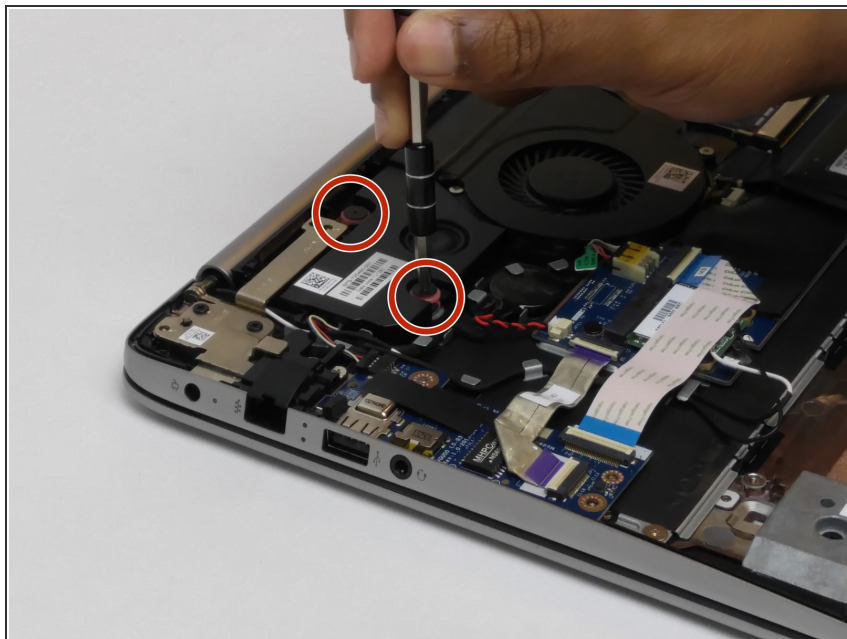

- Remove the two screws holding the speaker in place.

**i** There are two red rubber grommets which stay situated in the screw guide holes; be sure not to lose these.


## Step 6



- Once the screws have been removed, gently lift the speaker straight up, but just enough to dislodge it.

**!** There is a cable connecting the speakers to the sound board. Be sure to not tug on this connection when lifting the speaker.

## Step 7

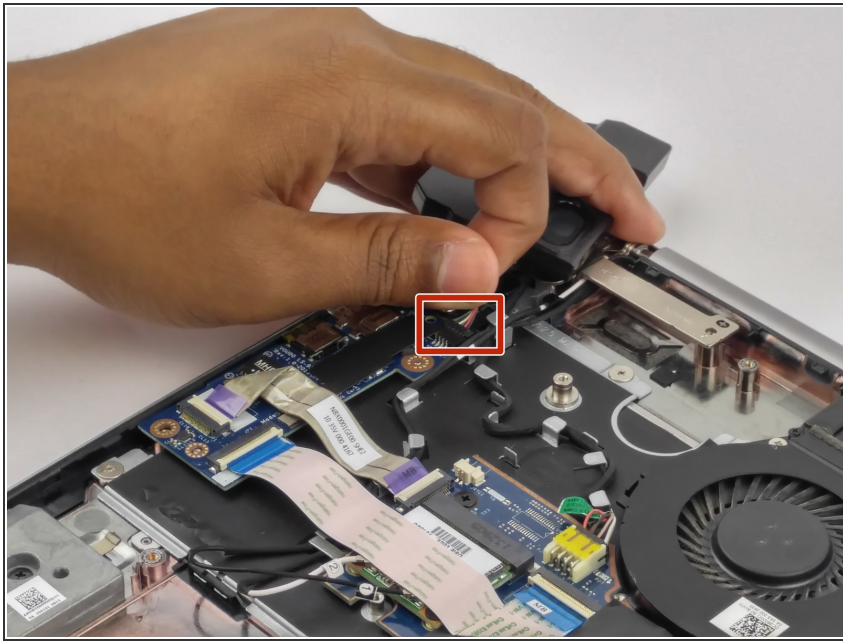

- Once the speaker is dislodged, gently pull the connecting cable from the sound card.
- The speaker is now fully removed and ready to be replaced.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 08:05:42 AM.